

JKAL

Utility
model
under
application

PC20~350

Utility model under application



All kinds of attachment can be mounted quickly without modification.

KOMATSU

One operator can change attachments quickly without any assistants.

Features

Safety is assured.

Attachments can be changed by one simple operation and the adjustment bolt has a safety lock.

No modification is required.

As no modification is required for any of the attachments mounting is quick. The fact that hydraulic piping is not required contributes your cost saving.

Efficient Operation

Attachments can be changed without pin removal, a feature which makes attachment changing quiet, safe and clean operation.



Procedure to mount an attachment





1 Hook the arm claw of the JKAL onto the pin of the attachment.



2 Push the bucket cylinder to engage the arm claw with the link claw.



3 Tighten the adjustment bolt, set the safety lock plate and insert a stopper pin to complete the procedure.

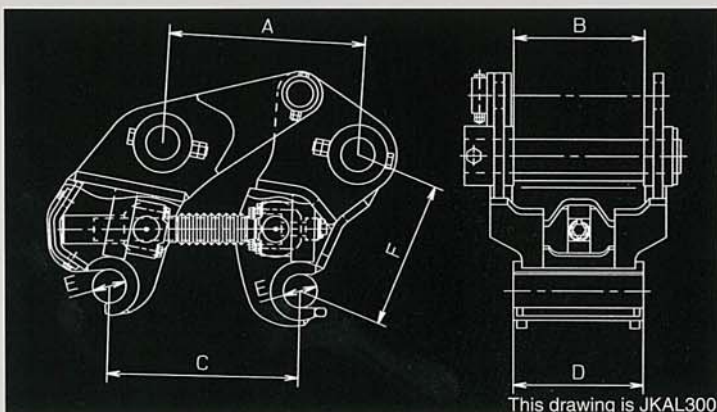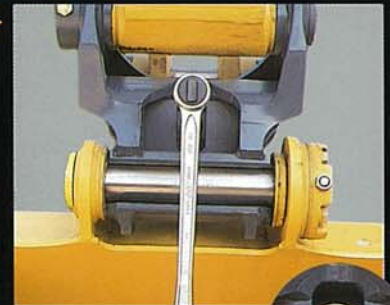

| Model | JKAL20 | JKAL40 | JKAL60 | JKAL100 | JKAL200 | JKAL300 |
|-------------------|-----------|-----------|-----------|-------------|-------------|-------------|
| Dimensions A (mm) | 187-209 | 247-277 | 306-343 | 389-439 | 445-503 | 488-554 |
| B | 145 | 170 | 202 | 261 | 326.5 | 346 |
| C | 140-250 | 180-330 | 225-390 | 310-540 | 368-570 | 402-625 |
| D | 143.5 | 168 | 198 | 258 | 325 | 345 |
| E | φ35 | φ45 | φ50 | φ60 | φ80 | φ90 |
| F | 180 | 210 | 245 | 285 | 350 | 396 |
| Weight*(kg) | 30 | 50 | 85 | 130 | 260 | 440 |
| Appropriate model | PC20-PC30 | PC40 PC45 | PC60-PC90 | PC100-PC130 | PC200-PC230 | PC300-PC350 |
| | PC28UU | PC38UU | PC50UU | PC75UU | PC128UU | PC228UU |

*Pins are not included.
 *1: The above is subject to technical alteration without prior notice.
 *2: Other manufacturers' attachments are acceptable.

Remark: When JKAL is mounted, the attachment may interfere with a boom or cabin.